

J. H. FLETCHER & CO.

ELECTRICAL SYSTEM PERMISSIBILITY CHECKLIST

DM-109

THIS BLOCK FOR MSHA USE ONLY	
ES #	32
REV. LEVEL	

Listed below are the items and functions that must be maintained for the electrical system to be considered permissible. For a complete equipment permissibility evaluation, this checklist must be used in conjunction with a machine checklist and a power system checklist.

ALL INSPECTIONS AND TESTS SHALL BE PERFORMED IN FRESH AIR.

A. All electrical enclosures must meet the following:

(WEEKLY) 1. () All electrical enclosures are intact (not cracked or broken). The headlight lenses are not loose.

(WEEKLY) 2. () All electrical enclosures have an MSHA plate attached that is clearly stamped with an MSHA certification number (X/P number). These numbers agree with those listed in TABLE 1.

(WEEKLY) 3. () Use feeler gauges of the appropriate size to insure the clearances between the enclosures listed in TABLE 1 and their corresponding covers are not exceeded.

4. () All joints forming the flame arresting paths (flanges and covers) are smooth and free from rust, corrosion and pitting.

TABLE 1

<u>ENCLOSURE</u>	<u>ITEM ON LAYOUT</u>	<u>X/P #</u>	<u>MAX. ALLOWABLE CLEARANCE</u>
ALTERNATOR	1	1622-4 or	.006"
	2	1622-2 or	.006"
	3	3849-0 or	(body) .006"
			(end plate) .004"
	4	3333-0	.006"
CONTROL BOX	5	3336-0 or	.004"
HEADLIGHT SWITCH	6	1683-2 or	.004"
	7	1820-0 or	.003"
	a	1856-0 or	.003"
	9	2187-4 or	.002"
	10	2187-5 or	.002"
		2107-0 or	.002"
		2107-1 or	.002"
		2456-0 or	N/A
		3846-0 or	.003"
		3692-0	.002"

(WEEKLY) - **DESIGNATES THOSE INSPECTION CHECK THAT MUST BE PERFORMED DURING THE WEEKLY MAINTENANCE EXAMINATION IN ACCORDANCE WITH 30 CFR, SECTION 75.1914**

DM-109
LAST REV. 11-26-97
SHEET 1 of 8

DO NOT REVISE WITHOUT PERMISSION FROM MSHA.

J. H. FLETCHER & CO.

TABLE 1
(Continued)

<u>ENCLOSURE</u>	<u>ITEM ON LAYOUT</u>	<u>X/P #</u>	<u>MAX. ALLOWABLE CLEARANCE</u>
HEADLIGHT	16	1468-3 or	N/A
	17	1468-10 or	N/A
	18	1468-11 or	N/A
	19	1468-28 or	N/A
	20	1468-31 or	N/A
	21	3157-0 or	N/A
	22	1774-2 or	N/A
	23	2659-0 or	N/A
	24	3579-0 or	.002"
	25	1275-2 or	.004"
	26	2320-0 or	.003"
	27	3221-0 or	.002"
	28	2145-2 or	N/A
	29	2145-3 or	N/A
	30	2145-5 or	N/A
	31	3470-0 or	N/A
	32	2372-0 or	N/A
	33	3493-0 or	.002"
	34	3493-1 or	.002"
	35	3612-0 or	.002"
	36	3795-0	.006"
<u>OPTIONAL:</u>			
MACHINE LIGHT	38	3586-0 or	N/A
	39	3843-0	N/A
<u>OPTIONAL:</u>			
CONNECTION BOX	40	1666-0 or	N/A
	41	3785-0 or	.002"
	42	2187-3 or	.002"
	43	2187-5 or	.002"
	44	2107-0 or	.002"
	45	2107-1 or	.002"
	46	2456-0 or	N/A
	47	3692-0	.002"
<u>OPTIONAL:</u>			
HEADLIGHT	56	1468-31 or	N/A
	57	3579-0 or	.002"
	58	3221-0 or	.002"
	59	3470-0 or	N/A
	60	3493-0 or	.002"
	61	3493-1 or	.002"
	62	3612-0 or	.002"
	63	3795-0	.006"

J. H. FLETCHER & CO.

B. Cables connecting electrical components must continue to be:

(WEEKLY) 1. () Clamped in place to prevent undue movement.

(WEEKLY) 2. () Protected from mechanical damage by position, flame resistant hose conduit, metal tubing or troughs.

Note: Flexible or threaded rigid metal conduit is not acceptable.

(WEEKLY) 3. () Not subject to abrasion from sharp corners or edges.

(WEEKLY) 4. () Isolated from hydraulic lines and components.

(WEEKLY) 5. () Isolated from fuel lines.

(WEEKLY) 6. () Flame resistant if not enclosed in hose conduit. This is indicated by "MSHA" Markings on the cable.

C. Hose conduit is:

(WEEKLY) 1. () Securely clamped at both ends and MSHA markings are present and appear as "Flame-Resistant, US MSHA, US MESA, or USBM 2G-() - "

D. Fasteners and mounts:

(WEEKLY) 1. () All electrical system components are securely mounted.

(WEEKLY) 2. () Headlights are guarded as shown in Figure 1 or guarded by location.

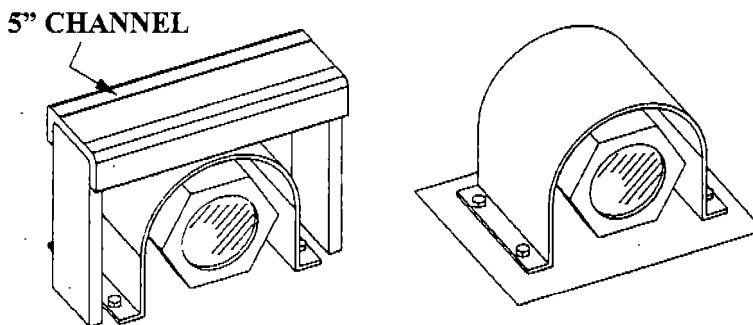


FIGURE 1

(WEEKLY) 3. () All threaded covers are secured from loosening by a locking screw, wire or other means.

(WEEKLY) 4. () Lockwashers or equivalent devices are provided for all bolts, screws or studs that secure parts of the explosion-proof enclosures.

J. H. FLETCHER & CO.

(WEEKLY) 5. () None of the fastenings used for joints on the explosion-proof enclosures are used for attaching non-essential parts or for making electrical connections.

E. Lead entrances (packing glands):

(WEEKLY) 1. () All lead entrances (packing glands) are assembled so that the cable jacket penetrates into the enclosure and when tightened, a 1/8" minimum clearance remains between the packing nut and stuffing box (Figure 2).


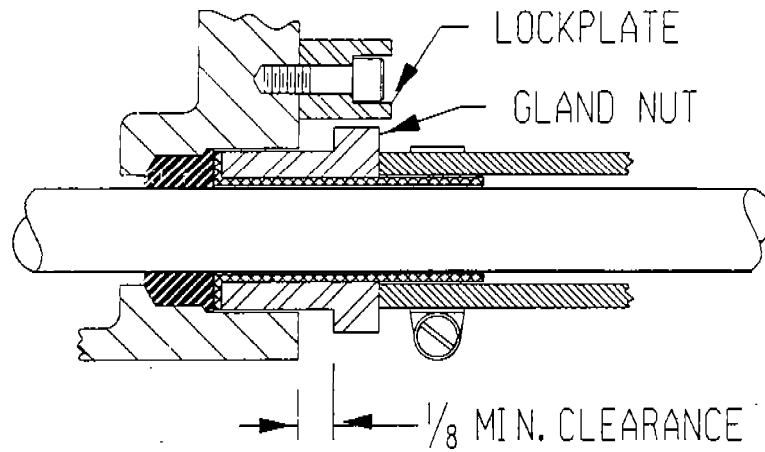


FIGURE 2

(WEEKLY) 2. () All packing nuts and stuffing boxes are secured from loosening by a locking screw, wire or other means (Figure 2). All unused lead entrances are closed with metal plugs which are secured in place by spot welding, brazing or equivalent (Figure 3).

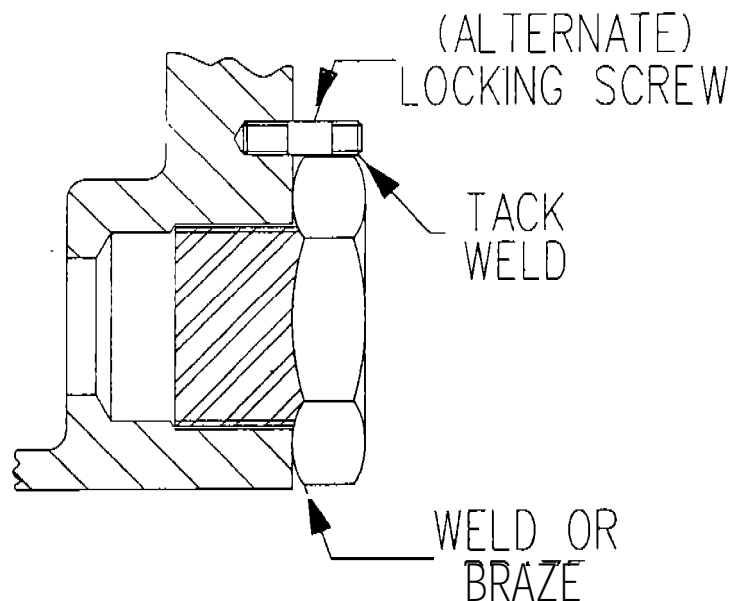

(WEEKLY) - DESIGNATES THOSE INSPECTION CHECKS THAT MUST BE PERFORMED DURING THE WEEKLY MAINTENANCE EXAMINATION IN ACCORDANCE WITH 30 CFR, SECTION 75.1914

DM-109
SHEET 4 of 8

DO NOT REVISE WITHOUT PERMISSION FROM MSHA.

J. H. FLETCHER & CO.

F. Headlights:

- (WEEKLY) 1. () Is/Are installed at each end of the machine.
- (WEEKLY) 2. () Lenses are not cracked, broken or loose.
- (WEEKLY) 3. () Each headlight is securely installed, guarded and operable.

G. OPTIONAL Headlights:

- (WEEKLY) 1. () Lenses are not cracked, broken or loose.
- (WEEKLY) 2. () Each headlight is securely installed, guarded and operable.

H. OPTIONAL Machine lights:

- (WEEKLY) 1. () Lenses are not cracked, broken or loose.
- (WEEKLY) 2. () Each machine light is securely installed, guarded and operable,

I-. Headlight Switch:

- (WEEKLY) 1. () The headlight switch must. operate properly. Verify by starting the engine, operating the switch and ascertaining its operation - turns the front and rear headlights on and off. The switch must not control or operate any electrical circuits other than the headlights.
- (WEEKLY) 2. () Headlight switch is securely in place.
- (WEEKLY) 3. () Headlight glands are sealed and assembled so that the cable jacket penetrates into the enclosure and when tight, a 1/8 inch minimum clearance remains between packing nut and stuffing box. (Figure 2).
- (WEEKLY) 4. () All unused lead entrances are closed with metal plugs which are secured in place by spot welding, brazing or equivalent (Figure 3).
- (WEEKLY) 5. () Headlight switch cover is properly installed with all bolts and lockwashers in place and tight (Figure 4).

J. Alternator

- (WEEKLY) 1. () "Alternator Housing" is securely in place.
- (WEEKLY) 2. () "Alternator Housing Glands" are sealed and assembled so that the cable jacket penetrates into the enclosure and when tight, a 1/8 inch minimum clearance remains between packing nut and stuffing box. (Figure 2).

(WEEKLY) - DESIGNATES THOSE INSPECTION CHECKS THAT MUST BE
PERFORMED DURING THE WEEKLY MAINTENANCE EXAMINATION IN
ACCORDANCE WITH 30 CFR, SECTION 75.1914

DO NOT REVISE WITHOUT PERMISSION FROM MSHA.

**DM-109
SHEET 5 of 8**

J. H. FLETCHER & CO.

(WEEKLY) 3. () "Alternator Covers" are properly installed with all bolts and lockwashers in place and tight (Figure 4).

SEE TABLE 1 FOR
MAXIMUM ALLOWABLE
CLEARANCE

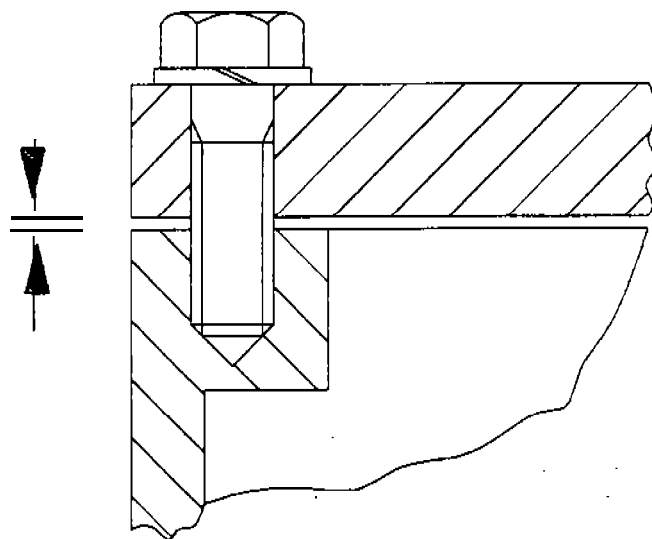


FIGURE 4

K. Other Electrical Permissibility Checks:

The, following checks may be performed when an electrical enclosure has been disassembled for whatever reason or if there is cause to believe a problem exists within the enclosure.

1. () Electrical connections inside the electrical enclosures are secure (not loose) and are insulated where space is limited. In addition, each headlight unit is electrically "grounded" to the machine frame by a separate conductor in the headlight cable. The ground wires are not broken and are securely attached to each headlight. .

To verify the above, remove the electrical enclosure covers; disconnect the ground wire attached to each headlight; use an ohmmeter or similar instrument to verify continuity between the ground wire and the frame of the machine for each headlight.

- 2 . () The engine-driven alternator lighting system includes a separate two-pole switch which controls the operation of the headlights. The switch is wired such that all power conductors in the cable(s) supplying electrical energy to the headlights are deenergize when the switch is placed in the "off" position.

J. H. FLETCHER & CO.

To verify the above, remove the cover form the electrical enclosure housing the headlight switch; remove the two main power wires (from the alternator) from the switch terminals; place the switch operator in the "off" position; use an ohmmeter or similar instrument to verify that the input power wire terminals on the switch are disconnected form all other wires attached to the switch terminals; reconnect the power wires to the switch terminals.

3. () Fuses are installed, in the wiring located inside the alternator housing and if applicable, Control Box (Certification No. X/P-3336-0), for short circuit protection of each power conductor in the lighting system.

To verify the above, disassemble the alternator enclosure; examine the wiring and each fuse; verify that a fuse, not exceeding 20 amps for Certification No. X/P-3849-0, and 15 amps for all others, is installed in each power conductor of the alternator cable. Also, if Control Box Enclosure, Certification No. XP-3336, is used, disassemble the control box enclosure and examine the wiring and each fuse, and verify that a fuse not exceeding 15 amps, is installed in each power conductor of the control box cables.

4. () Proper bulbs have been installed in the headlights and optional headlights.

To verify the above; disassemble the headlights; a 12 volt and a 35, 50, 60, 75, 100 or 150 watt bulb is installed.

5. () Proper bulbs have been installed in the optional machine lights.

To verify the above; disassemble the machine lights; a 120 volt and a 15, 18 or 20 watt bulb is installed.

